



Australian Government
Land & Water Australia

Design guideline for the reintroduction of wood into Australian streams



River Landscapes

DR ANDREW P. BROOKS



Acknowledgements

This Guideline is dedicated to the memory of the late Edwin Smith on whose property many of these trial works were undertaken. Special thanks also to Naida Smith and the Woodward family for their ongoing support and access to their land. Much of the research on which these guidelines are based was done under LWA projects MQU9 and GRU27; and ARC Linkage Project LP0346918. This project would never have proceeded without the generous support of Allan Raine from the NSW Department of Natural Resources and Sharon Vernon from the then Hunter Catchment Management Trust who were instrumental in facilitating the adoption of this experimental program within their respective organisations. Special thanks to Rod Gleeson for much of the survey work, the Dungog Work Crew and Rob Argent for their efforts implementing the rehabilitation works. Thanks also to Brian Woodward, Matt Taylor and John Jansen for data collection and analysis; Brian Woodward for the 3D Autocad drawings; Dean Oliver for drafting many of the figures and to John Spencer for GIS analysis. Special thanks to Peter Gehrke for undertaking the initial fish survey work, and to Bob Creese for his support of Tim Howell in undertaking the subsequent monitoring. The project has benefited from the efforts of numerous field assistants over the years, in particular, the NSW Fisheries crew — Simon Hartley, Andrew Bruce, Tony Fowler, Debrah Ballagh, Michael Rodgers, Ian Wooden and Tom Rayner. Thanks also to Scott Babakaiffe and Chris Gippel for their input into the development of the study design. The report has greatly benefited from reviews by Chris Gippel, Phil Price, Siwan Lovett and Tim Cohen.

ANDREW BROOKS


Design guideline for the reintroduction of wood into Australian streams

Dr Andrew P. Brooks

RiverLandscapes

CONTRIBUTORS

Tim Abbe, Tim Cohen,
Nick Marsh, Sarah Mika,
Andrew Boulton, Tony Broderick,
Dan Borg, Ian Rutherford

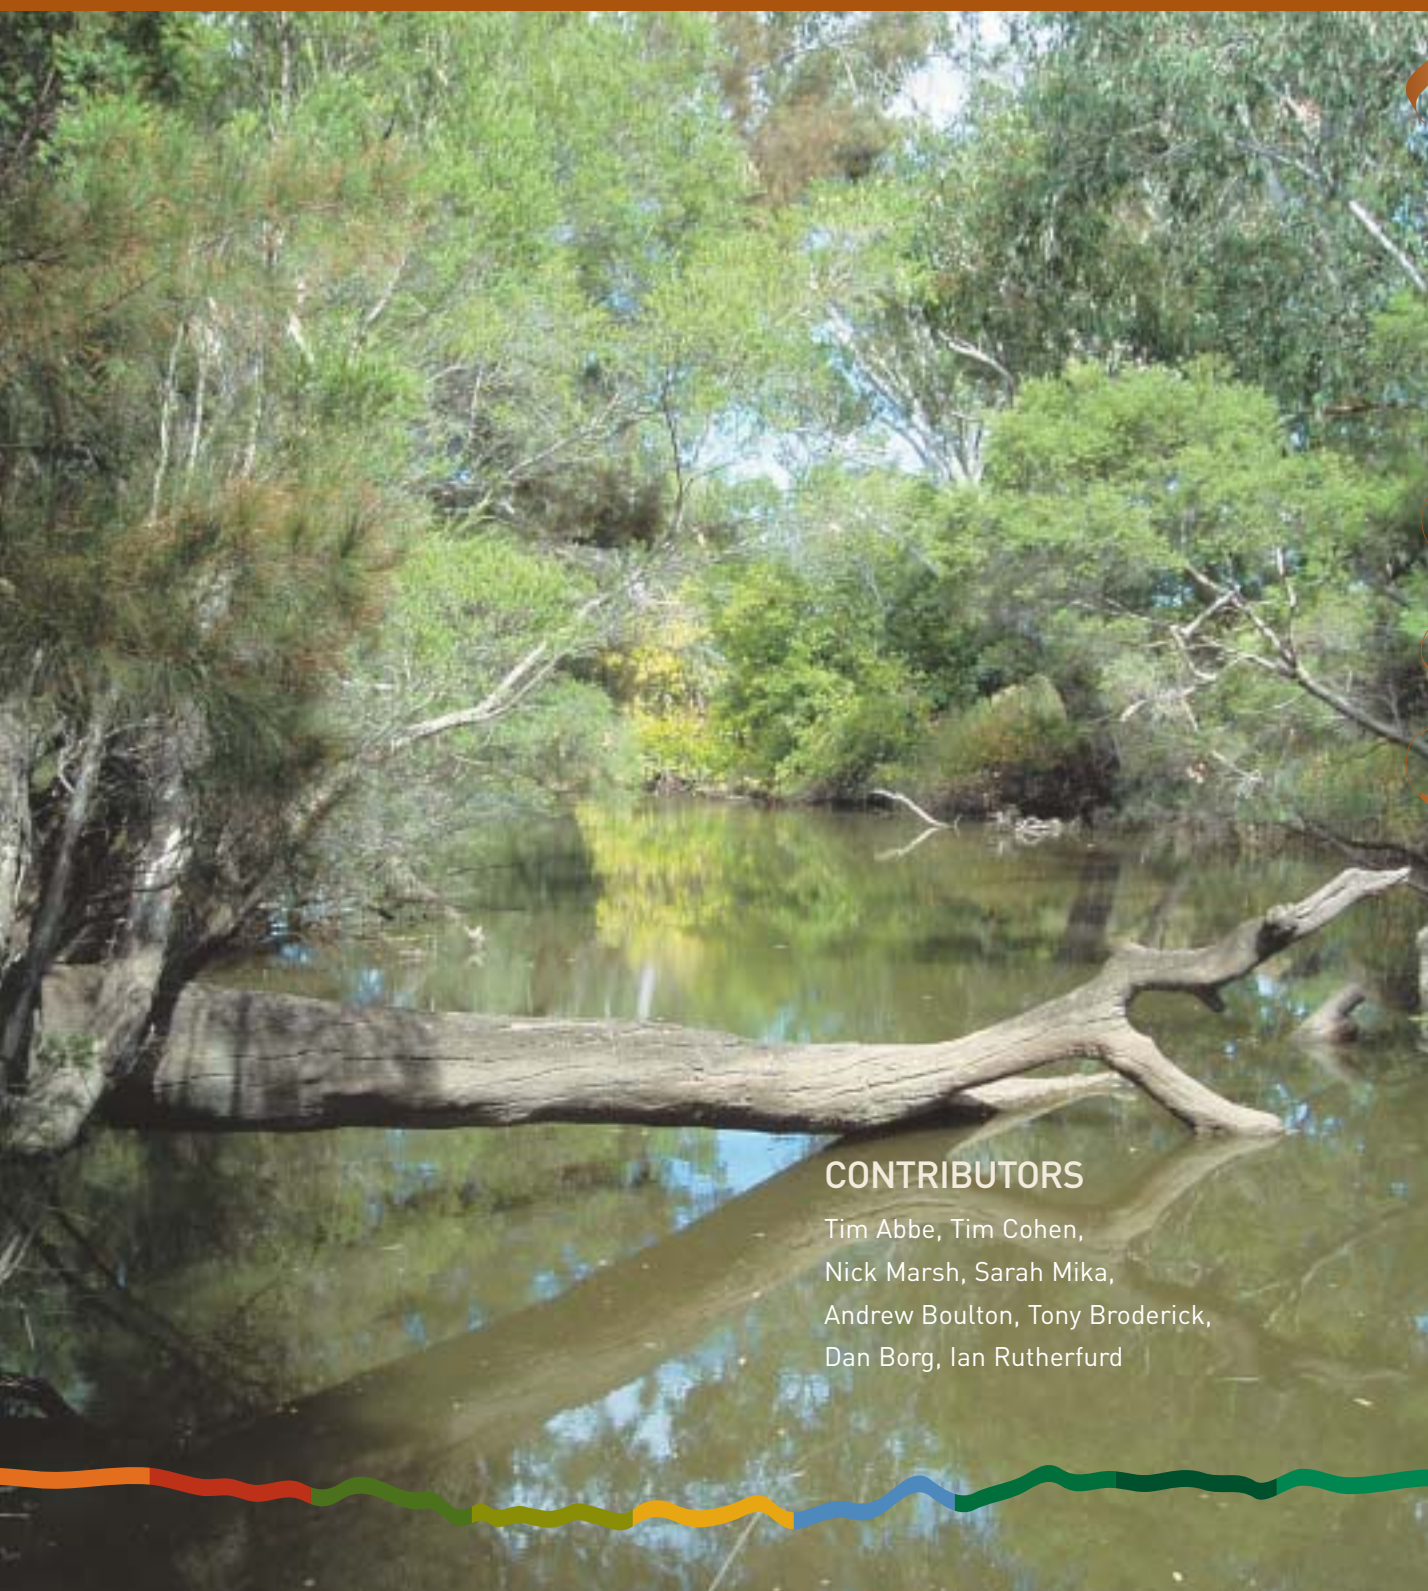

This Guideline was written by Dr Andrew P. Brooks, Australian Rivers Institute, Griffith University, Nathan Qld 4111 with contributions by Tim Abbe (Herrera Environmental Consultants, Seattle); Tim Cohen (University of Wollongong); Nick Marsh (Queensland Environmental Protection Authority); Sarah Mika and Andrew Boulton (University of New England); Tony Broderick (NSW Northern Rivers Catchment Management Authority); and, Dan Borg and Ian Rutherford (University of Melbourne).

Design guideline for the reintroduction of wood into Australian streams

Published by: Land & Water Australia
Postal address: GPO Box 2182, Canberra ACT 2601
Office location: L1, The Phoenix
86 Northbourne Avenue, Braddon ACT
Telephone: 02 6263 6000
Facsimile: 02 6263 6099
Email: Land&WaterAustralia@lwa.gov.au
Internet: <http://www.lwa.gov.au>

Disclaimer: The information contained in this publication is intended for general use, to assist public knowledge and discussion, and to help improve the sustainable management of land, water and vegetation. It includes general statements based on scientific research. Readers are advised and need to be aware that this information may be incomplete or unsuitable for use in specific situations. Before taking any action or decision based on the information in this publication, readers should seek expert professional, scientific, technical and legal advice.

To the extent permitted by law, the Commonwealth of Australia, Land & Water Australia (including its employees and consultants), the authors and its partners do not assume liability of any kind whatsoever resulting from any person's use or reliance upon the contents of this document.

ISBN: 1921 253 061 (print), 1921 253 07X (web)
Citation: Brooks, A. et al. 2006, *Design guideline for the reintroduction of wood into Australian streams*, Land & Water Australia, Canberra.
Product code: PX061171
Cover photos: Front cover, Tim Howell; background image, Roger Charlton. Back cover, Dan Keating.
Internal photos: Andrew Brooks, unless otherwise credited. Bark and wood texture photos throughout, Roger Charlton.
Design: Angel Ink
Print: Paragon Printers
Date: December 2006

Contents

List of photos	v
List of figures	vi
List of tables	vi
1 Introduction	1
1.1 Purpose of this Guideline	1
1.2 Who is this Guideline for?	2
1.3 Why bother with planning and design — why not just throw them in?	3
1.4 Not the last word	3
2 The functions of wood in rivers	5
2.1 Summary	5
2.2 New research: Using wood to restore hyporheic processes	6
3 The engineered log jam concept	9
3.1 Historical background	9
3.2 Principles underpinning engineered log jams	10
3.2.1 Cost	11
3.2.2 Function	11
3.2.3 Engineering properties	13
3.2.4 Downside of ELJs	13
3.3 The Williams River experimental wood reintroduction project	13
3.3.1 Wood reintroduction strategy and rationale in the Williams River study	14
3.3.2 Key findings	15
4 A wood reintroduction planning procedure	21
Step 1 Define your goals	21
Step 2 Determine the underlying problems within your river	22
Step 3 Develop your reach-scale rehabilitation prescription	22
Step 4 Develop structure designs	22
Step 5 Identify limitations, problems and logistical constraints	23
Step 6 Undertake project construction	23
Step 7 Develop a monitoring and evaluation strategy	23
5 Determining the underlying cause of your stream's problem	25
5.1 What is going on in your stream — historical review of channel change	25
5.2 Common causes of channel change	25
5.2.1 Direct disturbances	26
5.2.2 Indirect disturbances	27
5.3 Sources of evidence to ascertain river channel change	27
5.3.1 Historical evidence	27
5.3.2 Field evidence	28
5.4 Common signs for common problems and implications for rehabilitation	30
5.4.1 Channel incision	30
5.4.2 Channel widening	31
5.4.3 Accelerated bank erosion	31
5.4.4 Sedimentation (e.g. sand slug influx)	32

6	Developing your reach rehabilitation prescription	33
6.1	Wood rehabilitation project design: Key questions	33
6.1.1	Questions likely to arise when developing reach prescription	33
6.2	Preliminary investigations	38
6.2.1	Catchment context of river reach	38
6.2.2	Reach dynamics	38
6.2.3	Reach baseline data	39
6.2.4	Reach planform map	40
6.2.5	Bed material statistics	40
6.3	Standard ELJ design	40
6.3.1	Basic bank erosion control structure — impermeable deflector jams (DFJs)	40
7	Designing log structures	43
7.1	Data requirements to perform force-balance stability analysis and design of a wood reintroduction strategy	43
7.2	Selecting a design flood	43
7.3	Hydraulic modelling	45
7.4	Prediction of scour at LWD	46
7.4.1	2D hydrodynamic modelling	46
7.4.2	Scour in sand-bed creeks — insights from the Granite Creeks sand-bed pool scour experiments	47
7.5	Anchoring strategies	49
7.5.1	ELJs in a gravel-bed river	49
7.6	Stabilisation using piles	50
7.7	Structure stability analysis	50
7.7.1	Overview	50
7.7.2	Computational procedure for force-balance analysis	51
7.7.3	Example of spreadsheet computation procedure	53
8	Monitoring and evaluation	55
8.1	Dealing with “failure”	56
9	Building log structures	57
9.1	Construction phase planning	57
9.1.1	Professional indemnity insurance	57
9.1.2	Landholder approvals and maintenance agreements	57
9.1.3	Permit requirements	58
9.1.4	Log sourcing	58
9.1.5	Site preparation	60
9.1.6	Machinery and site logistics	60
9.1.7	OH&S considerations	61
9.1.8	Construction procedure — standard ELJ	62
9.1.9	Revegetation and stock exclusion	65
9.1.10	Legal liability issues	65
Appendices		
A	Alternative log structures	67
B	Worked example of pile stability analysis	79
C	Bibliography	81

List of photos

Photo 1	Natural log jam — Allyn River, NSW	1
Photo 2	Bank deflector jam under construction — Williams River, NSW	2
Photo 3	Constructed bed control log structure — Stockyard Creek, NSW	2
Photo 4	Natural sand-bed river with a high wood loading and high morphologic diversity — Thurra River, Victoria	4
Photo 5	Natural log jam — Allyn River, NSW	5
Photo 6	Constructed hyporheic-jam (log step) — Hunter River, NSW	8
Photo 7	Constructed hyporheic jam (i.e. log step with paired abutment jams) — Williams River, NSW	8
Photo 8	Early model log bank revetment, with cable and rock ballast — Obi Obi Creek, Queensland	9
Photo 9	Constructed log jam — Hunter River, NSW	10
Photo 10	Naturally recruited log demonstrating the tendency of logs with root wads to dig into the river bed	11
Photo 11	Natural log constriction forced pool — Allyn River, NSW	11
Photo 12	Constructed log jams — Stockyard Creek, Hunter Valley, NSW	12
Photo 13	Constructed log jams — Hunter River, NSW	12
Photo 14	Natural log jam — Tasmania	12
Photo 15	Natural log jam — Tasmania	12
Photo 16	Boat electro-fishing — Williams River test reach	24
Photo 17	Backpack electro-fishing — Williams River test reach	24
Photo 18	Desnagging and riparian vegetation clearance were still the primary management responses after extreme floods on the Tambo River, Victoria in 1998	25
Photo 19	Channel incision and widening associated with gravel extraction — Nambucca River, NSW	26
Photo 20	Cattle with access to streams affects both the in-stream and riparian ecosystems	27
Photo 21	Palaeo-channel on a floodplain — Cann River, Victoria	28
Photo 22	Channelised swamp with rock works emplaced to prevent channel incision — Jingallala River, Victoria	29
Photo 23	Floodplain sediments showing post-settlement alluvium — Bega River, NSW	29
Photo 24	Exposed bridge pier caps on the West Cann Bridge indicating channel incision — Cann River, Victoria	30
Photo 25	Knickpoint resulting from systemic channel incision — Nambucca River, NSW	30
Photo 26	Channel widening resulting from an extreme flood — Tambo River, Victoria	31
Photo 27	Accelerated bank erosion associated with stock trampling — Tasmania	31
Photo 28	Classic sand slugged river — Bega River, NSW	32
Photo 29	Recovering sand-slugged stream — Wollombi Brook, NSW	32
Photo 30	Natural log jam — White Rock River, NSW	33
Photo 31	Natural wood loading in a forested stream — D'Entrecasteaux region, Tasmania	34
Photo 32	Natural wood accumulations — Macintyre River, Queensland	35
Photo 33	Offloading logs at the project site — Williams River, NSW	36
Photo 34	A natural 1.5 m high log step on the upper Allyn River, NSW	38
Photo 35	Bank deflector jam that appears to have failed, but in fact is still there — only buried	55
Photo 36	"Failed" cross-spanning log bed control structure — Williams River, NSW	56
Photo 37	DFJ construction in full swing — Williams River, NSW	57
Photo 38	A universally rotating log grab makes log placement a much easier and more efficient process	59
Photo 39	A 4WD tractor/loader like this one is an essential piece of equipment at a log structure construction site	59
Photo 40	Log staging and sorting area in a paddock adjacent to the rehabilitation site — Williams River, NSW	60
Photo 41	Check the substrate stability before you enter!	60
Photo 42	A 22 tonne excavator with a non-rotating grab offloading logs for use in bed-control structures	61
Photo 43	Warning signs should be erected at your project site to indicate the boundaries of the project area	61
Photo 44	Example of sign warning river users of changed conditions ahead at the Williams River site	65

List of figures

Figure 1	Bed morphological variability with and without in-stream wood	4
Figure 2	The central location of the hyporheic zone linking surface water, groundwater and the riparian zone	6
Figure 3	Longitudinal schematic of an idealised streambed	7
Figure 4	A log lying half-buried in the streambed across a channel in the Williams River is capable of inducing localised upwelling and downwelling of streamwater	8
Figure 5	This constructed deflector jam extending into the channel in the Williams River caused scalloping of the edge of the gravel bar across the channel	8
Figure 6	Williams River study site	13
Figure 7	Reach scale log structure layout	14
Figure 8	Flow hydrograph and monitoring timeline for Williams River study	15
Figure 9	Sediment retention/loss at each morphological survey period compared to the baseline (survey 1)	16
Figure 10	Change in bar area at each survey period post wood reintroduction compared to the baseline (survey 1)	16
Figure 11	Change in pool area through time after wood reintroduction	17
Figure 12	Change in channel complexity through time after wood reintroduction	17
Figure 13	Upper section of Munni test reach at the commencement of construction of DFJ1 and after flood events	18
Figure 14	Residuals of reach geomorphic change through time for the Williams River experimental reach	19
Figure 15	Example of airphoto time series 1940, 1958, 1967, 1971 — showing major channel changes	28
Figure 16	Wood loading and fringing riparian vegetation density along six south-eastern Australian streams	34
Figure 17	Example of a thalweg profile through a rehabilitation reach	39
Figure 18	Example of a thalweg survey showing deviations from the thalweg profile trendline	39
Figure 19	Example of reach survey plan onto which the reach rehabilitation strategy is overlaid	41
Figure 20	Standard engineered log jam — section view	42
Figure 21	Standard bank attached deflector jam — plan view	42
Figure 22	Construction sequence for a standard deflector jam	42
Figure 23	Annual exceedence probability curves for the Tillegra gauge (station 210011)	45
Figure 24	Example of HecRas model output for determining design velocities for structure emplacement locations	45
Figure 25	Scour associated with a bar apex jam — Queets River, USA	46
Figure 26	Scour associated with bank attached jams — Williams River	46
Figure 27	Example output of 2D hydrodynamic modelling from the Hoh River engineered log jam project WA, USA	46
Figure 28	Observed response of Hoh River project site to engineered log jam emplacement	47
Figure 29	Artificial habitat structures in the Granite Creeks	48
Figure 30	Anticipated and observed scour pool geometries	48
Figure 31	Scour pool data for a pool in the Lower Snowy River	48
Figure 32	Conceptual model of forces applied to a cohesive structure within a river channel	50
Figure 33	Schematic step by step diagrams of deflector jam construction	62

List of tables

Table 1	Example of log costing from Williams River experimental project site	36
Table 2	Reach gradient and maximum scour predictions using two empirical methods	40
Table 3	Examples of rehabilitation reach bed-material statistics derived from a Wolman survey	40
Table 4	Wood density characteristics for common Eucalypt species	44
Table 5	Example of spreadsheet used for undertaking a force balance analysis	54
Table 6	Typical log dimensions for standard engineered log jam construction	62
Table 7	Pile displacement under alternative loads	79